

# IMPORTANT INFORMATION


## INFO SHEET



### ALL MODELS


1. Simply unscrew the brown wire from its original position.
2. Loosen black wire screw at centre of the plug and slide brown wire into centre plug together with existing black wire.
3. Tighten centre screw.

### INCORRECT

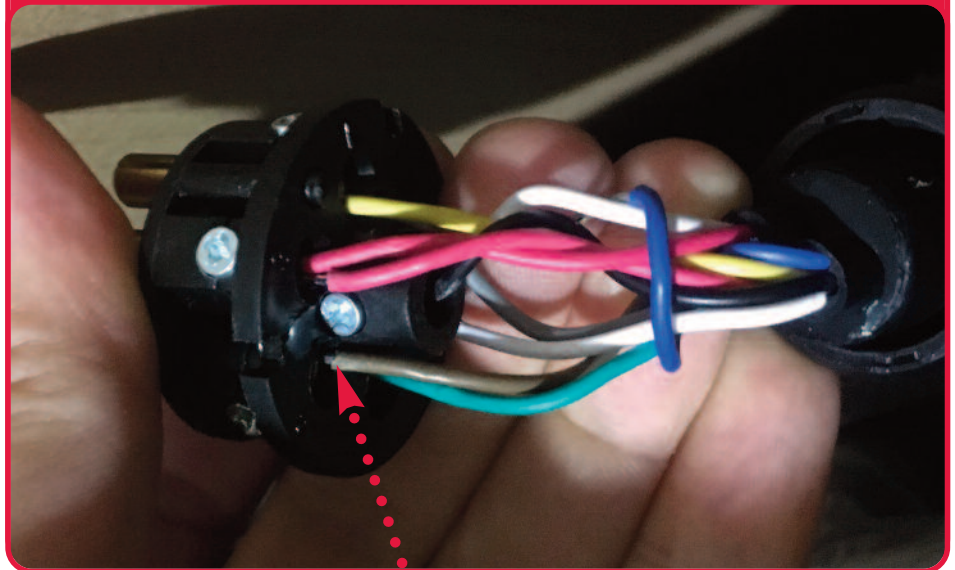

• BROWN wire in wrong position

### CORRECT

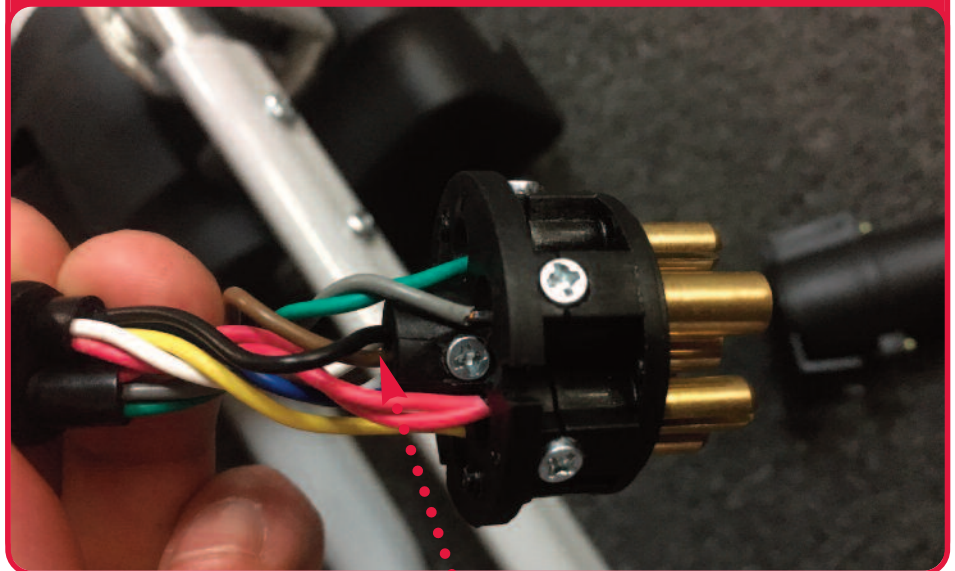

• BROWN wire in correct position